

ESN NET

USER GUIDE



Adult assembly required

Read User Guide before assembling






Please keep this guide for further reference



SUPER TRAMP
Part of the Family - Est 1983

Tel: +44 (0)1884 675801 | www.supertramp.co.uk | sales@jetsports.co.uk

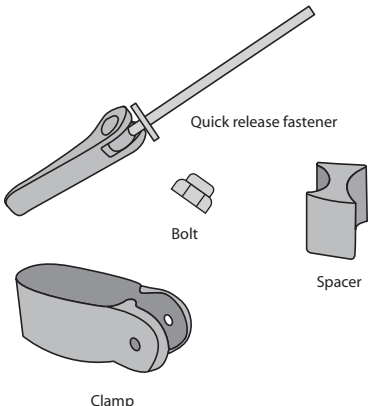Bouncer Parts List

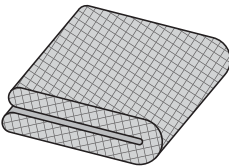Part Image	Description	Number
 <p>Quick release fastener</p> <p>Bolt</p> <p>Spacer</p> <p>Clamp</p>	Clamp Kit	16 of each part
	Top Pole with Foam and Top Cap	8
	Bottom Pole with Foam	8
	Enclosure Net	1
	Bungee Loops with Q-Hook	16

Fixing the enclosure poles to the frame

Before you start: Please remove the frame pads

STEP

1

Start by removing the foam from the bottom enclosure poles.

STEP


2

Next, begin to fix each bottom pole to the corresponding trampoline leg using the clamps provided.

Ensure that there is a black rubber spacer positioned between the pole and the trampoline leg.

Next, make sure the clamp opening is positioned facing the inside of the leg.

Note: there should be two clamps per pole; one positioned around ~30cm from the trampoline frame and the other around ~30cm from the ground.

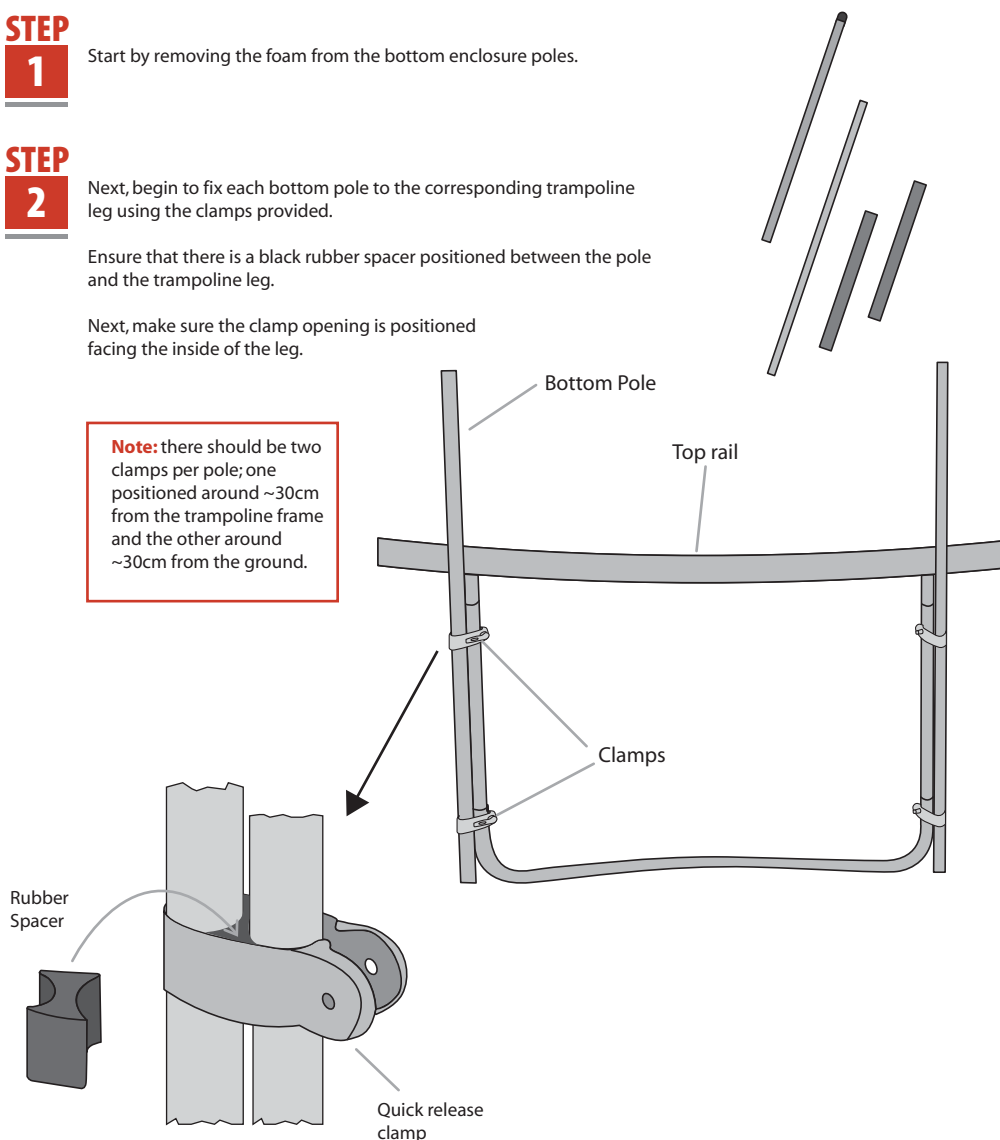

STEP



3

Thread the quick-release fastener through the two holes in the clamp and squeeze the clamp together as tightly as you can.

STEP

4

Secure the quick-release fastener by screwing the bolt on by hand.

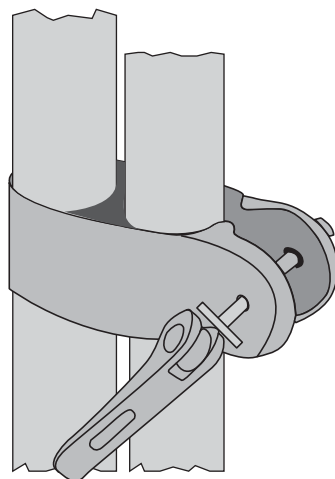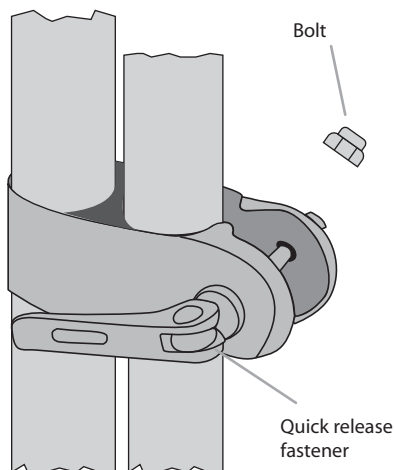

STEP

5

Next, use the handle on the quick-release fastener to tighten the clamp together so that the pole is fixed to the leg securely.

STEP

6


Continue this process pole by pole, ensuring there are two clamps per pole.

Make sure the clamps are secured tightly so the poles do not wobble and the rubber spacers are fixed in place.

STEP

7

Finish by sliding the foams back over the poles. Now take each top pole section and fit onto the corresponding bottom pole section. Note that there will be an overhang of foam from the bottom poles so you will need to angle the top pole section to fit into there.

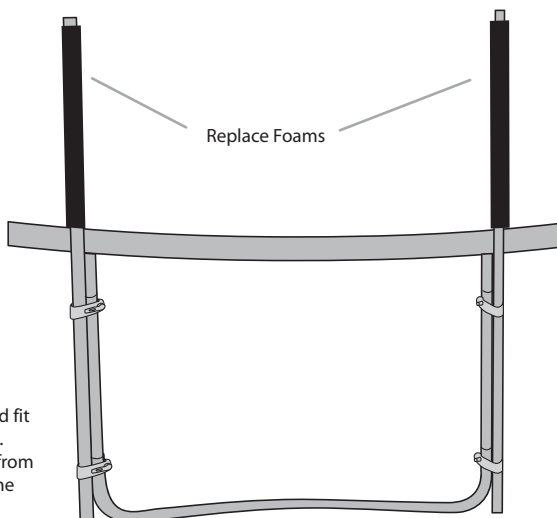


Attaching the net

STEP 1

Begin by laying the net out on top of the trampoline bed.

Find the middle seam on the net and proceed to attach eight bungee loops with Q-hook to the clips on the net.


1a). Next, attach the bungees on the net to the middle eyebolts on the enclosure poles. Please make sure that the net does not twist during this process.

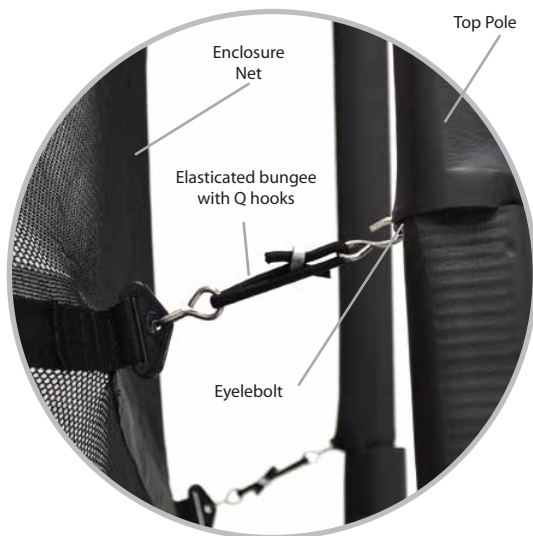

STEP 2

You should now find that the net is hanging from the middle of the poles. Along the bottom hem of the net you should see small slots (holes).

Each one of these slots corresponds to a steel triangle on the bed. There are the same number of each. Make sure they line up before attaching the net to the bed.

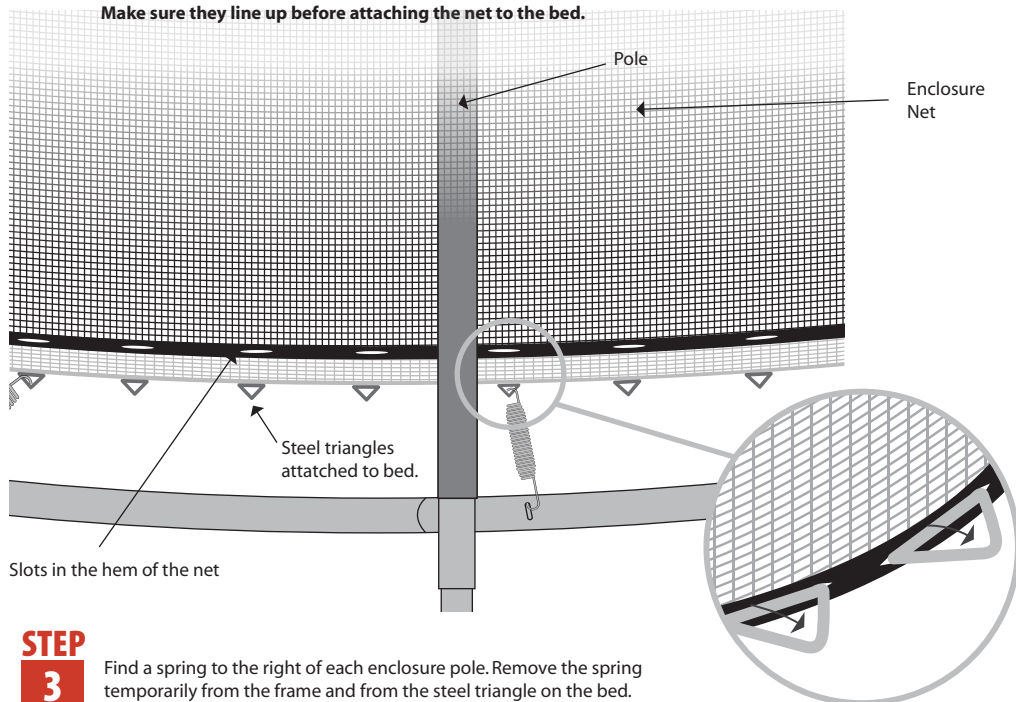

STEP 3

Find a spring to the right of each enclosure pole. Remove the spring temporarily from the frame and from the steel triangle on the bed. Slot the net over the triangular anchor of the bed using the corresponding spring slot (count to make sure the anchor and slot align otherwise the net will twist). Once attached, hook the spring back onto the bed anchor and into the frame as before.


STEP 4

Continue this process around the trampoline frame until the net is fully fitted to the steel triangles on the bed.

STEP 5


If you twist the net during this stage by fitting the incorrect slot to the steel triangle, it will continue to twist as you work your way around the frame and will not line up properly when you have finished.

This can result in the entrance becoming misaligned which can negatively impact the function of the zip and lead to damage.

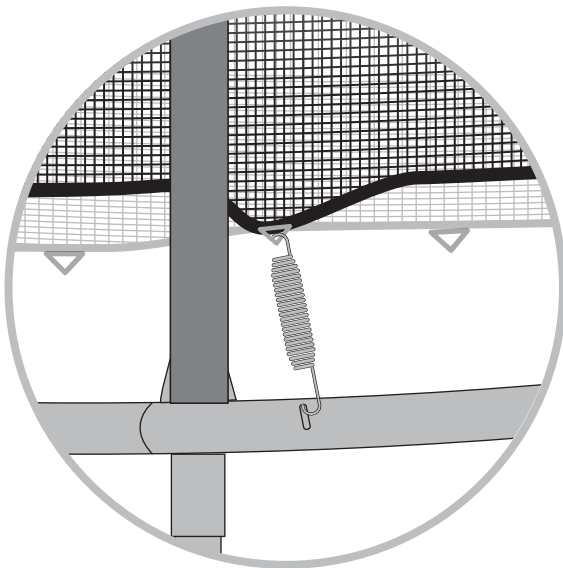

STEP 6

Re-fit the frame pads as before with the net laying on top of the bed.

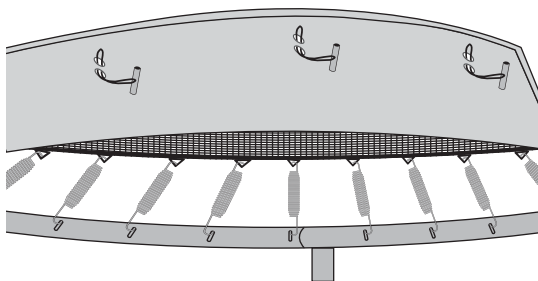

Completing the net

STEP 1

With the frame pads now fitted, use the 16 bungee loops with Q hook to connect the net to the steel enclosure poles.

Start by doing this at the middle-point of the poles as they can be attached whilst standing on the ground.




STEP 2

Once completed, remove your footwear and enter the trampoline through the door of the enclosure. Now you can finish attaching the bungee loops to the net at the top of the poles.

All 16 bungees should now be attached and the enclosure fully assembled.



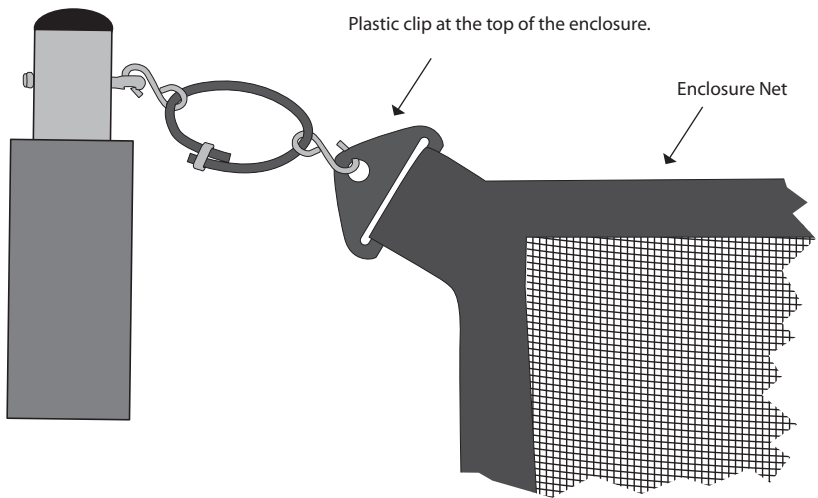

CONGRATULATIONS!

Your

ESN NET

is now assembled and ready for use.

Don't forget to pick up a Ground Anchor Kit for those windy days.




Do not bounce in footwear. Instead, use grip socks. You can buy these from us in a variety of sizes!



Thank you for purchasing a Super Tramp product
We hope you found this guide helpful.

Visit our website for our full range of
trampolines, spare parts and accessories

www.supertramp.co.uk

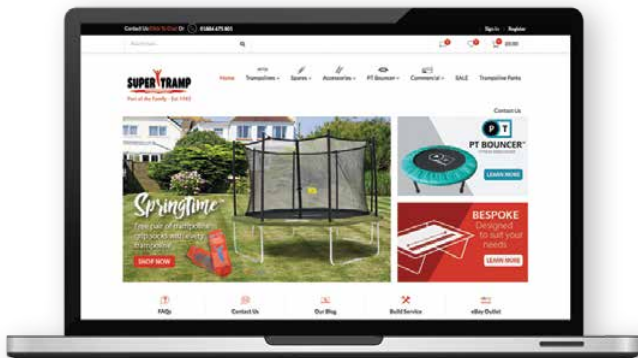

Follow Us On Social Media!

