


Replacing A 2-String Boomer Bed

A 'HOW TO' GUIDE

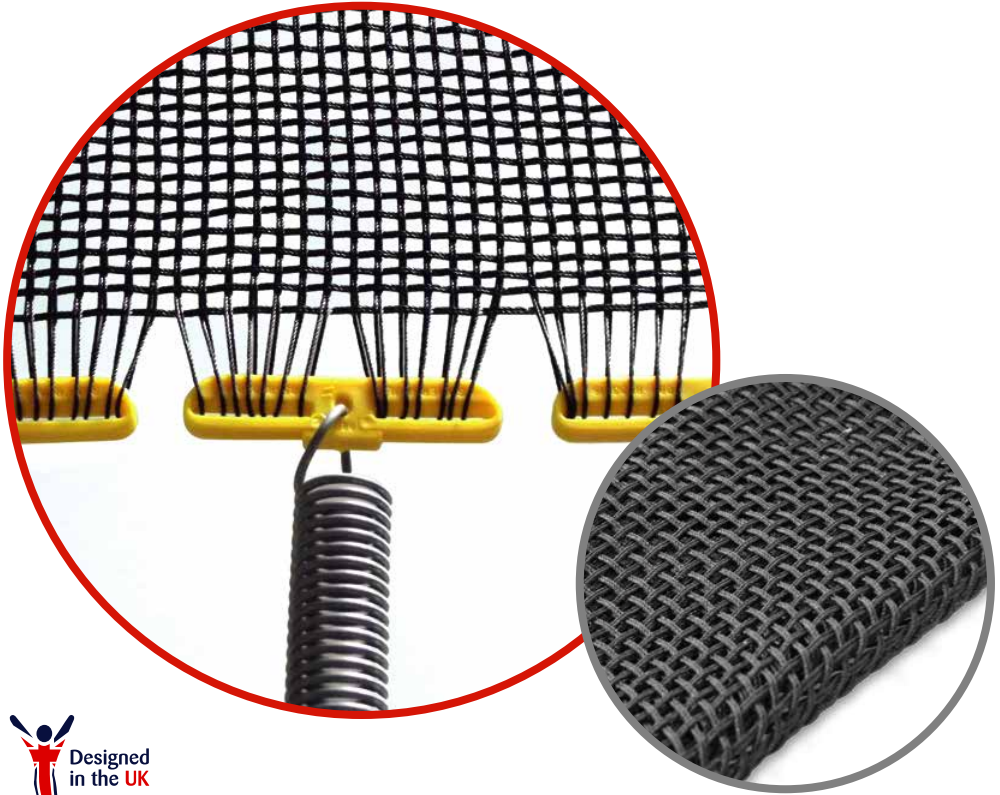

Designed
in the UK

Adult installation required

Read User Guide before installation

Please keep this guide for further reference

SUPER TRAMP

Part of the Family - Est 1983

Tel: +44 (0)1884 675801 | www.supertramp.co.uk | sales@jetsports.co.uk

Replacing your 2-String Boomer Trampoline Bed

STEP



1

First, you will need to remove your old bed from the trampoline.

Begin by removing a spring from the frame using a spring tool, then cross over to the other side of the trampoline and remove the opposite spring. Continue this process of creating a mirror image on each opposite side because this process helps to evenly distribute the tension through the bed, making the spring removal process much easier.

Use the diagram below for reference.

Remove the corner springs last.

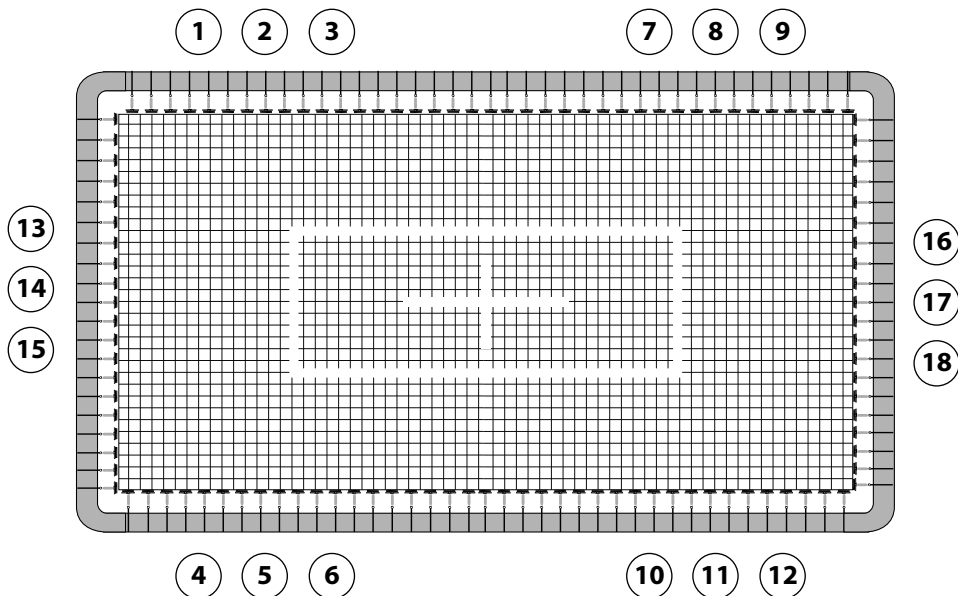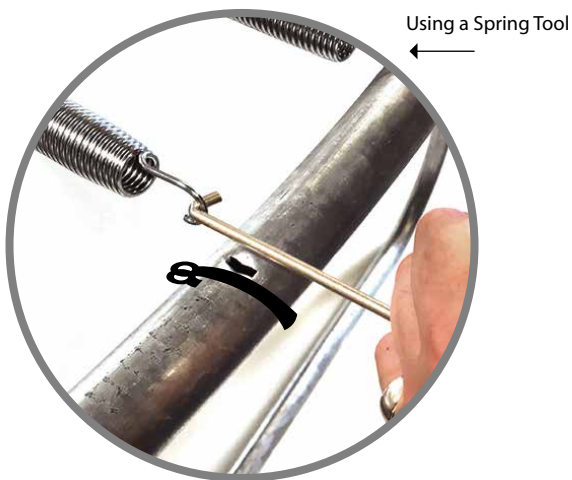


Unpack your new bed

STEP

2

Begin by unfolding your new **2-string bed** and laying it on the ground inside the frame. Ensure the painted markings on the bed are facing upwards.

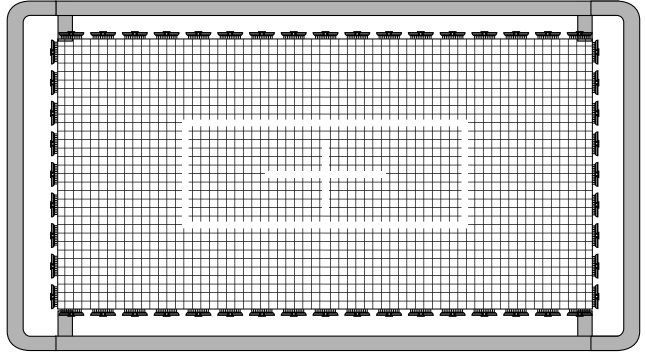

TO ORDER SPARES

If you require replacement anchor straps or springs for your Boomer, these can be ordered through our website:

www.supertramp.co.uk

Boomer Springs:

9.25 Inch (235mm)

SKU: PGTPSP3009510




Anchor Straps

SKU: PGTPAS00STDBK



Boomer Elevator Kit



SKU: BOOMELEKIT

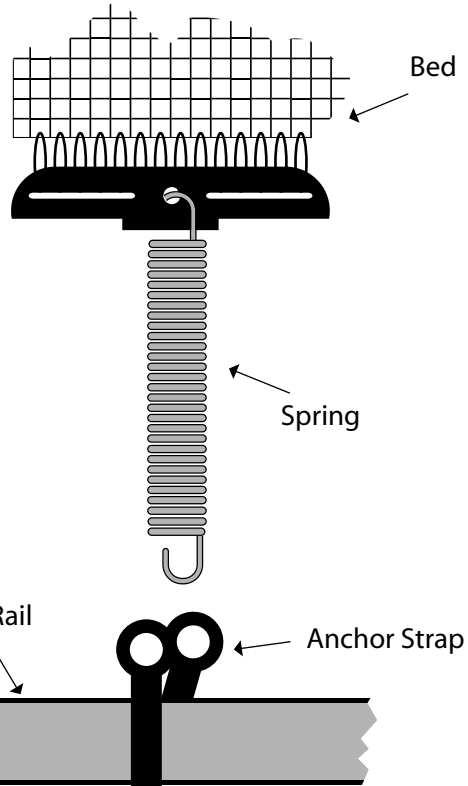

STEP 3

Using the diagram below as an example, begin to fit the new bed to your trampoline following the sequence 1-10.

You should continue to work at opposites at all times to evenly distribute the tension through the bed, (Example shows following the numbers within squares to eventually fitting the remaining springs until all 118 springs are attached).

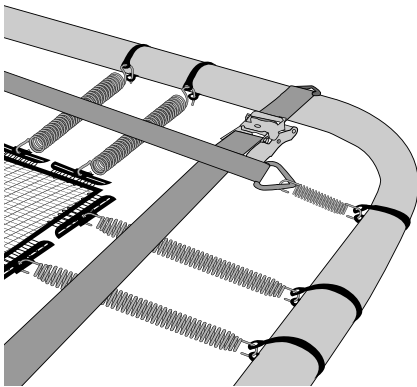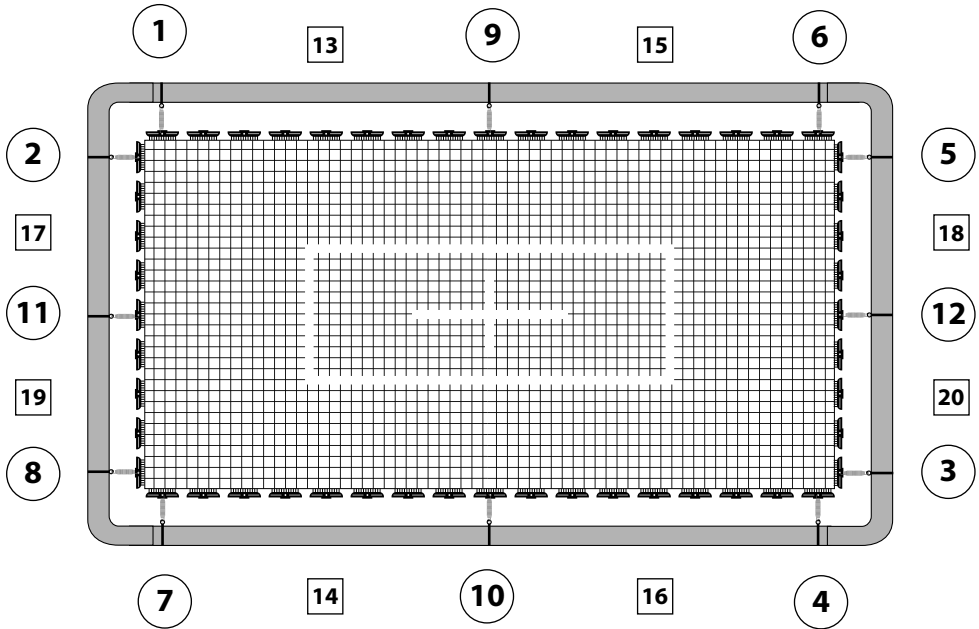

STEP 7

Reattach the elevator kit and then the frame pads

